

Cotton Candy Machine Instructions

CAUTION: Operator must keep hands and face clear of the head and spectators at a safe distance. DO NOT put objects into the rotating heads it is dangerous. Do not touch any metal part of the machine as it can get extremely HOT.

MAIN SWITCH - Turns motor "on" or "off" and supplies current to the heat switch.

HEAT SWITCH - Turns current to the heating element (ribbon) "on" or "off."

HEAT CONTROL - Increases or decreases voltage to ribbon wire heating element using a graduated dial.

1. Plug the machine in. DO NOT USE MORE THAN 50 ft of extension cord. With main switch still OFF, fill floss head about 90% full with sugar. NEVER ADD SUGAR WHEN MOTOR IS RUNNING. DO NOT OVERFILL!!!! This is necessary to obtain a balanced condition in the floss head or excessive vibration will occur. Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration of the head.
2. After adding floss sugar, turn the motor on.
3. Turn main switch and heat switch to "ON" position to make cotton candy floss.
4. Turn heat control knob in the clockwise position to maximum setting. This setting will produce the fastest possible warm up
5. The machine should begin to make floss in a few seconds. ***When the unit gets up to heat, it will probably start to smoke. Just turn the heat control knob in the counter clockwise direction to eliminate the smoking.***
6. Once you find the ideal setting for the HEAT CONTROL, you should be able to operate near this

CAUTION: NEVER operate equipment for a prolonged period of time with the HEAT CONTROL in a position that causes the sugar to smoke. If you smell burning sugar or see smoke, reduce the heat.

ROLLING THE FLOSS:

First, pick up the cone. If it sticks in the stack of cones, do not "pull", rather "twist" it off the stack. Hold an inch or two of the pointed end of the cone between your two fingers and your thumb. With a light flicking action, break the web of floss that is building up in the pan and roll the floss onto it. DO NOT ROLL THE FLOSS ONTO THE CONE WHILE IT IS INSIDE THE PAN. This will just pack the floss onto the cone.

If you experience difficulty in getting the floss to stick to the cone, it will be helpful to pass the cone near the spinner head to pick up a "starter" of melted sugar.

(When stopping operation for the day or any prolonged period, it is good to run all the sugar out of the floss head. When empty, turn the heat to the highest position for approximately one minute to somewhat "clean" the band. NEVER ALLOW WATER TO ENTER THE FLOSS HEAD.)

Please return the machine clean to avoid any additional charges. If you have any questions or trouble with the machine please call (509) 525-0774 for assistance.